

Instrucciones de montaje · Assembly Instructions

CP-1821 OVO

ES • IMPORTANTE: A CONSERVAR PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

EN • IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

FR • ATTENTION: CONSERVER POUR CONSULTER AU FUTUR.

IT • IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE. TENERE PER FUTURE CONSULTAZIONE.

PT • IMPORTANTE: MANTENHA PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

R • ВАЖНО: СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ. ВНИМАТЕЛЬНО ПРОЧИТАЙТЕ.

A • لاملعتس الالبق مادي ج أرقا. عة ارمل للظفح ا. ماه

CN • 重要事项：保留以备将来参考，请仔细阅读。

ES • NO APRIETE LOS TORNILLOS DEL TODO HASTA TENERLA COMPLETAMENTE MONTADA.

EN • DO NOT FULLY TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED.

IT • SERRARE LE VITI A MONTAGGIO AVVENUTO


PT • NÃO APORTE OS PARAFUSOS COMPLETAMENTE, ATÉ TER COMPLETAMENTE MONTADA.

R • НЕ ЗАТЯГИВАЙТЕ ВИНТЫ ДО ОКОНЧАТЕЛЬНОЙ СБОРКИ.

FR • ASSEMBLEZ LE BERCEAU AVANT DE SERRE COMPLETEMENT LES VIS.

AR • ببيكرت لاول عجل الة لملع نم ءاهت نإل اى تح ي غاربل ا دش م كسحت ال

CN • 在完全装好前，不要拧紧全部的螺钉。

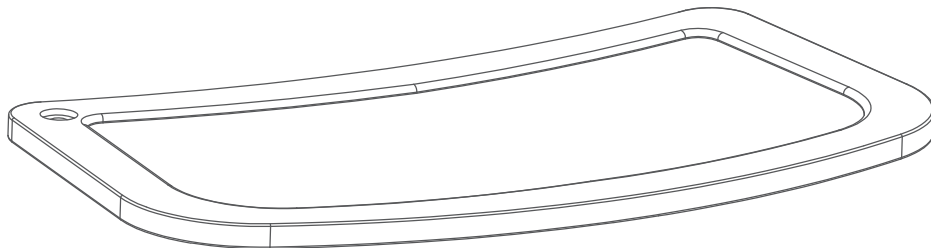



4mm



5mm



20 min.




**No usar destornillador eléctrico.
Utilizar herramienta manual.**


Do not use an electric screwdriver.
Use a hand tool.




C00188
x1 (M4x9)




C10423
x1 (M8x40)





C07914
x2 4mm




C07506
x1 5mm




C10784
x1

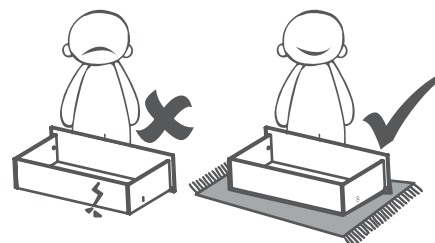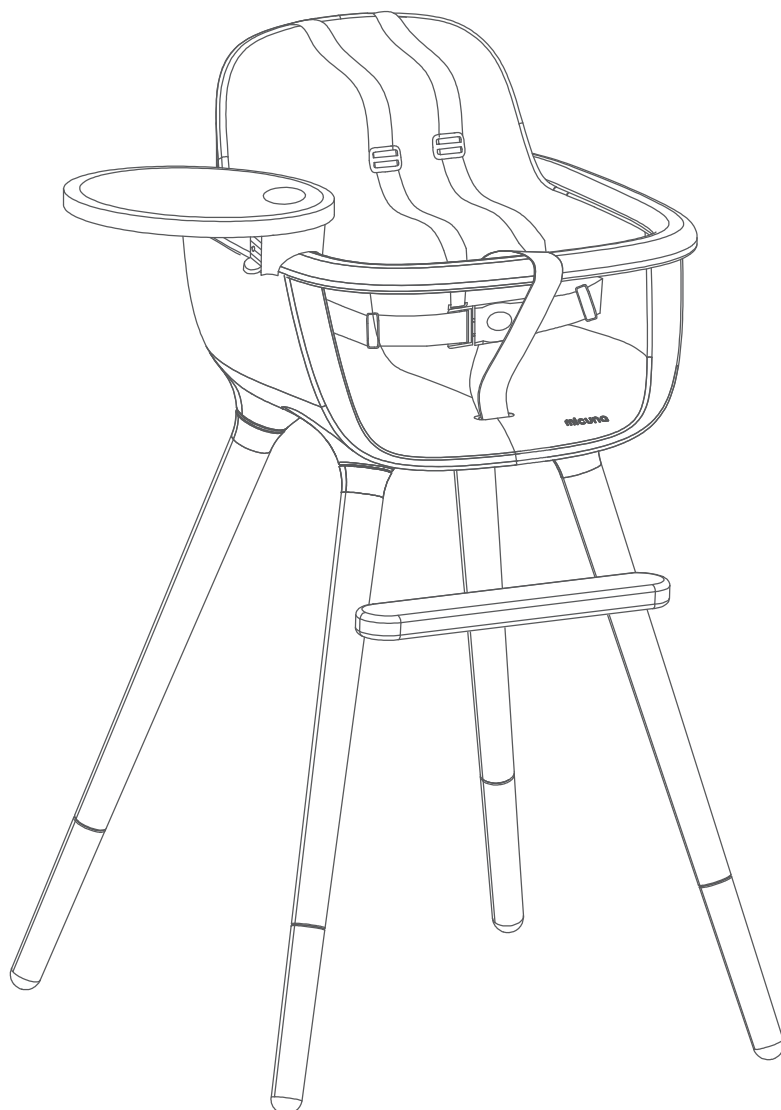


1 x1 5mm

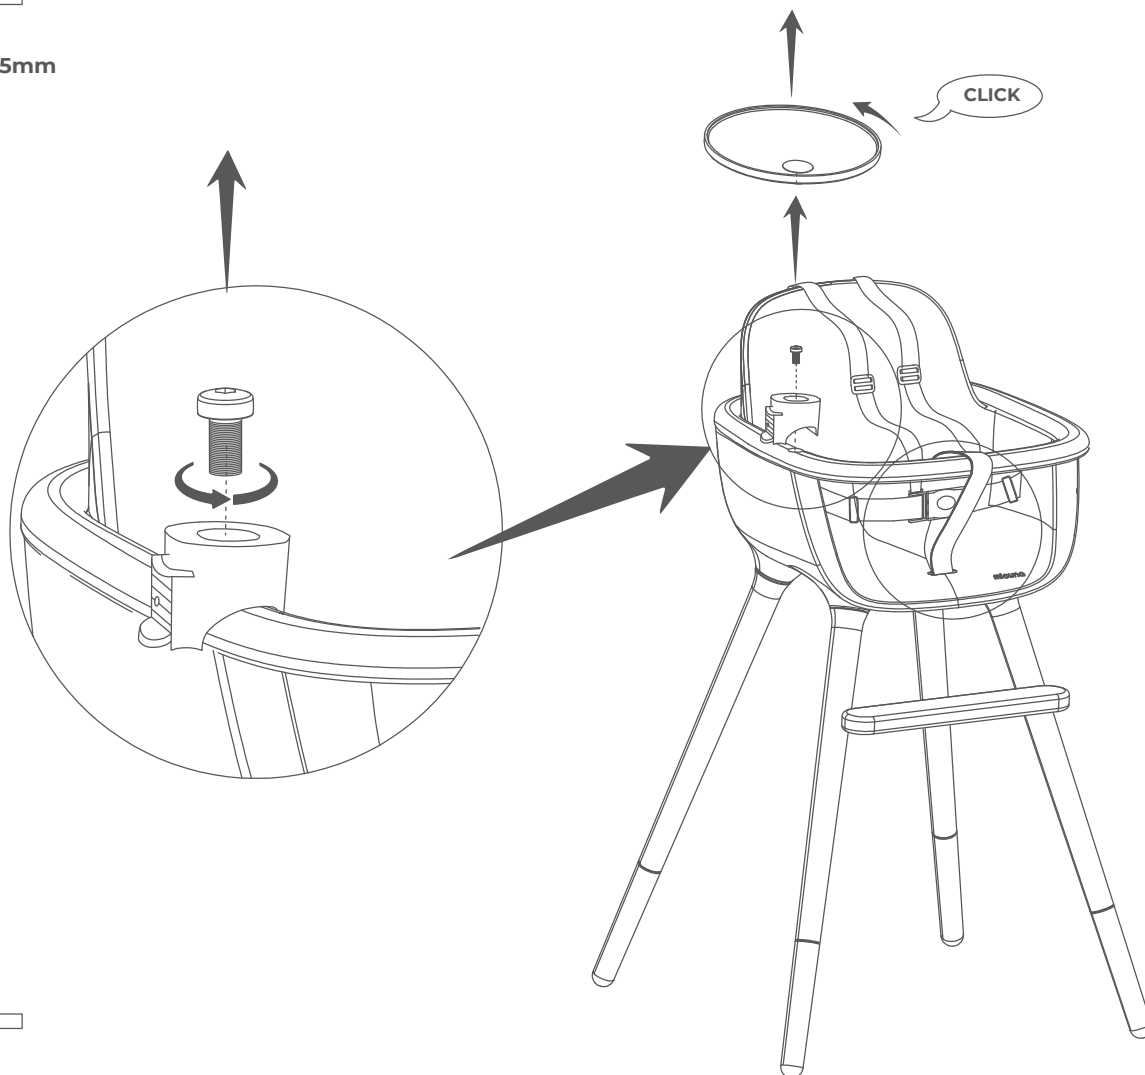


2 x1 4mm

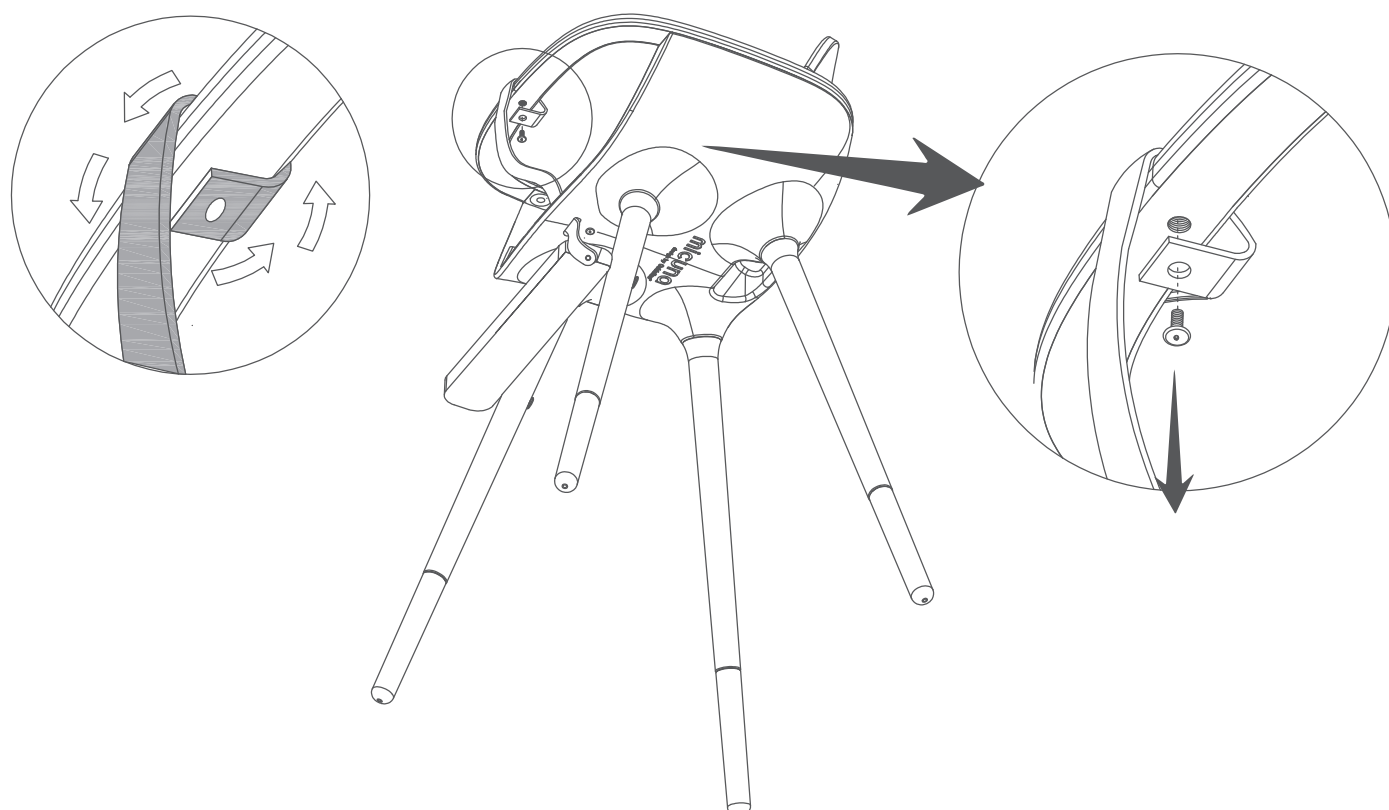


3_{x1} 

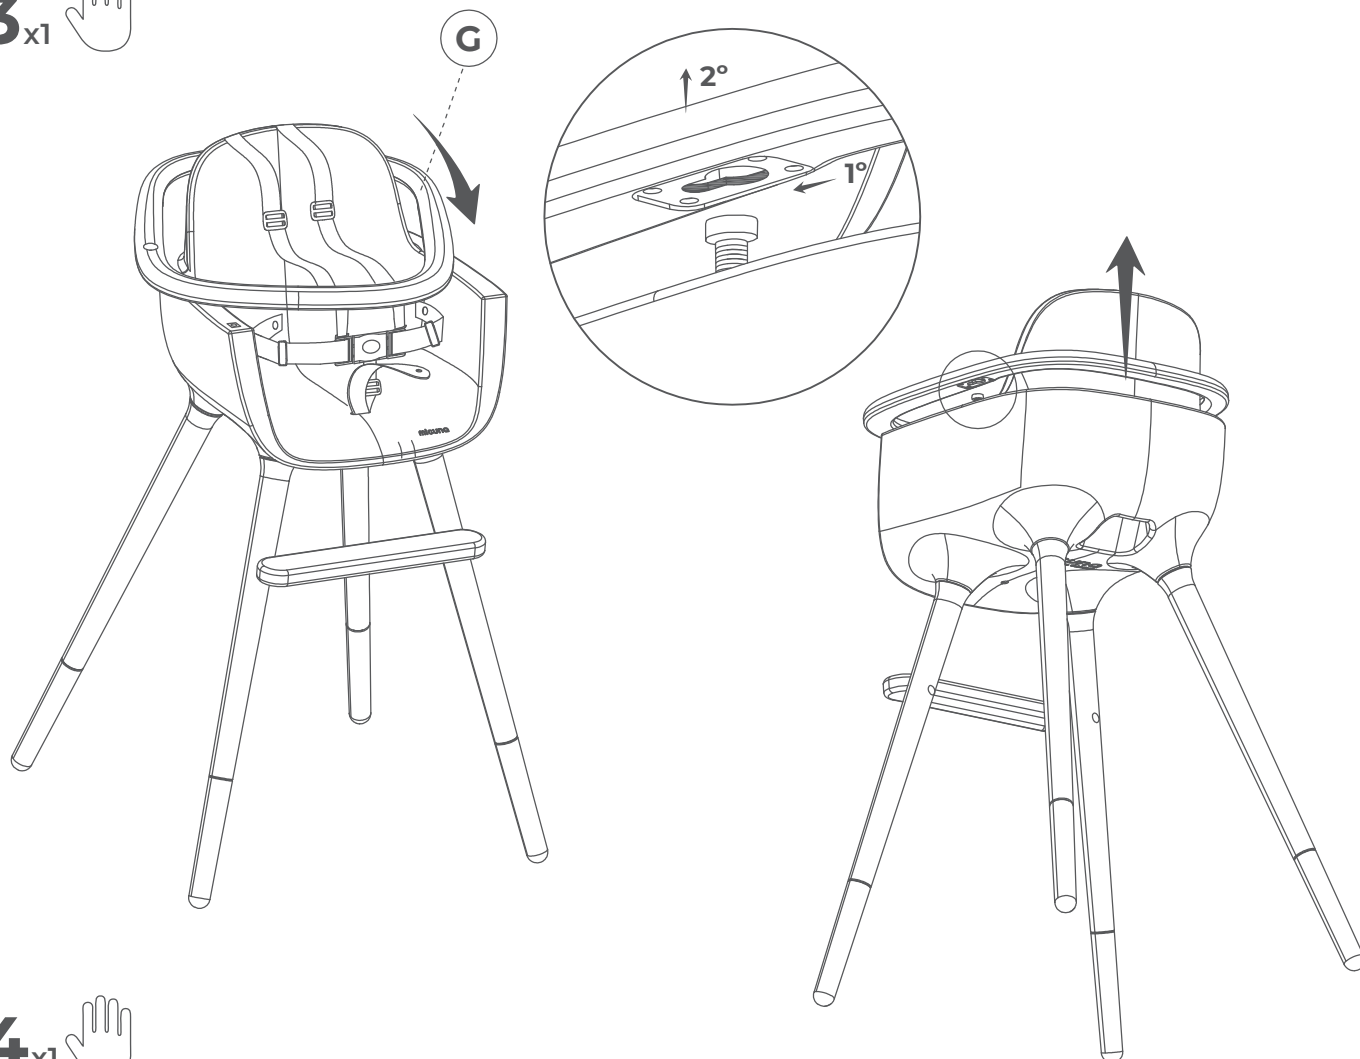



4_{x1} 

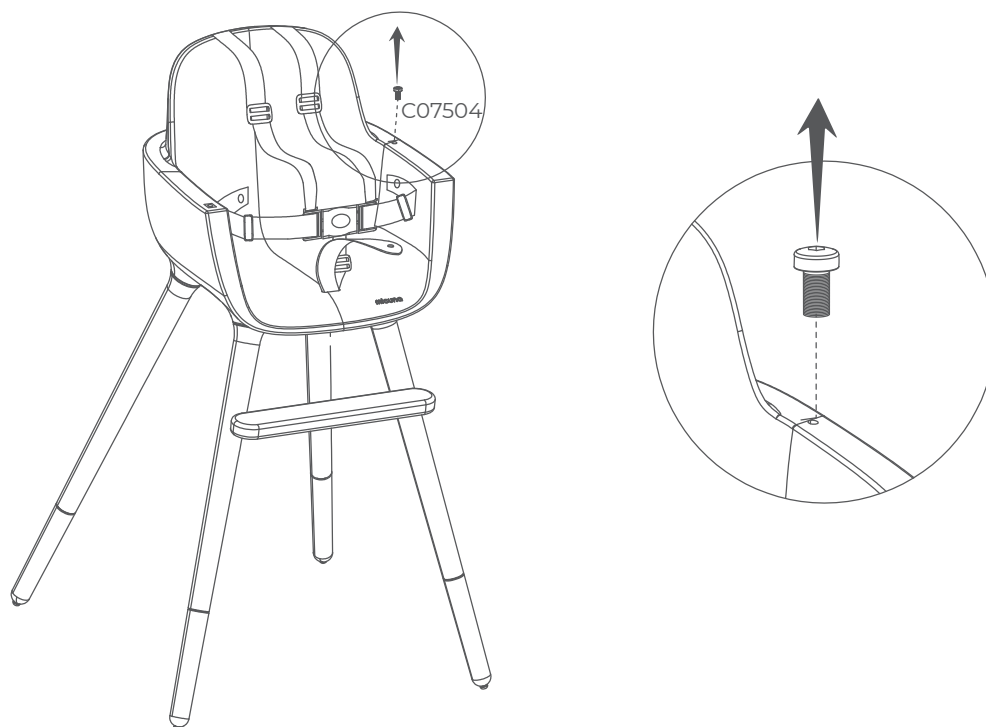


5_{x1} 




C10784
x1

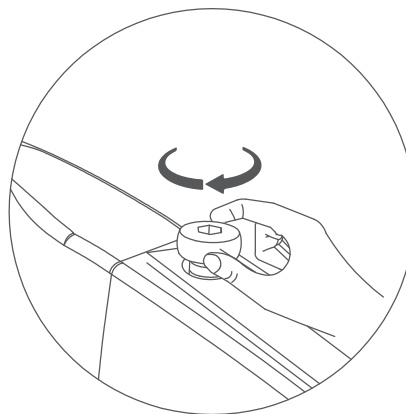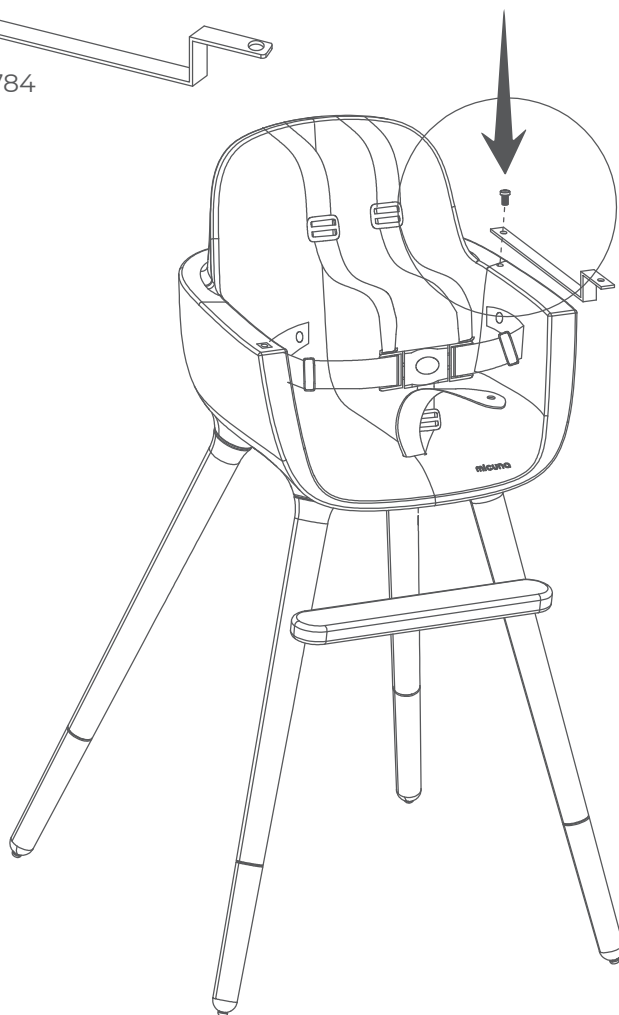



Apertar hasta el final.
Tighten up until the end

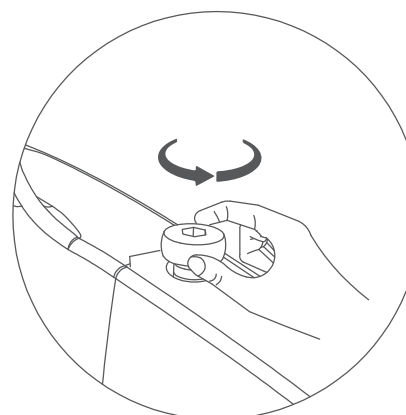




**Desenroscar sólo una vuelta
(360°)**
Unscrew only 1 turn
(360°)

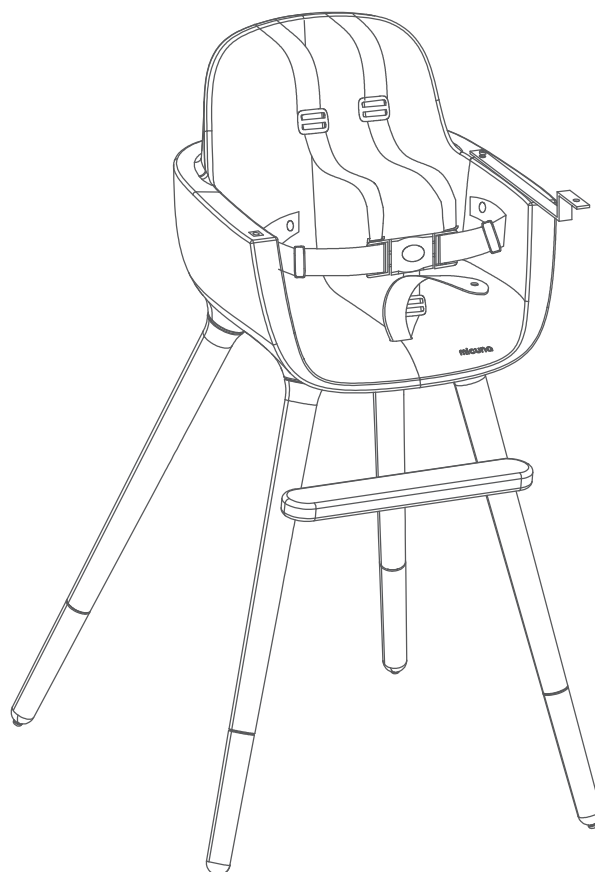


6x1 

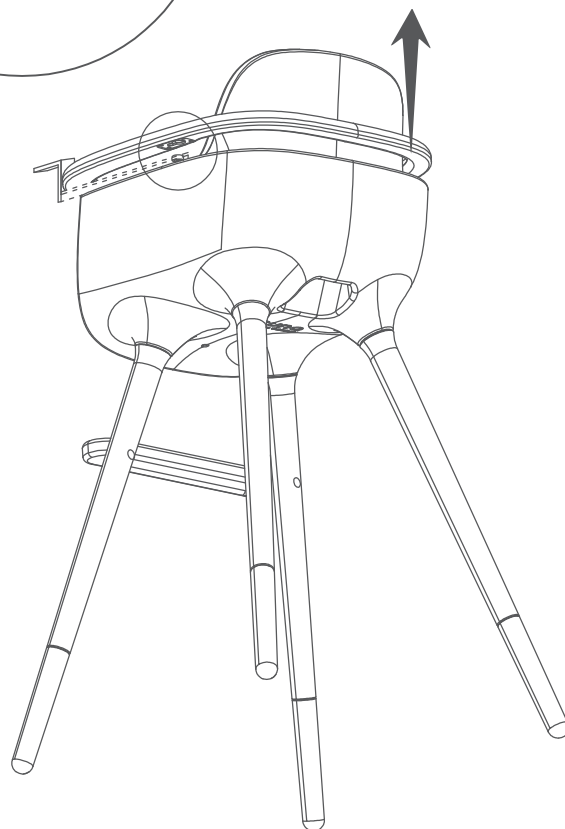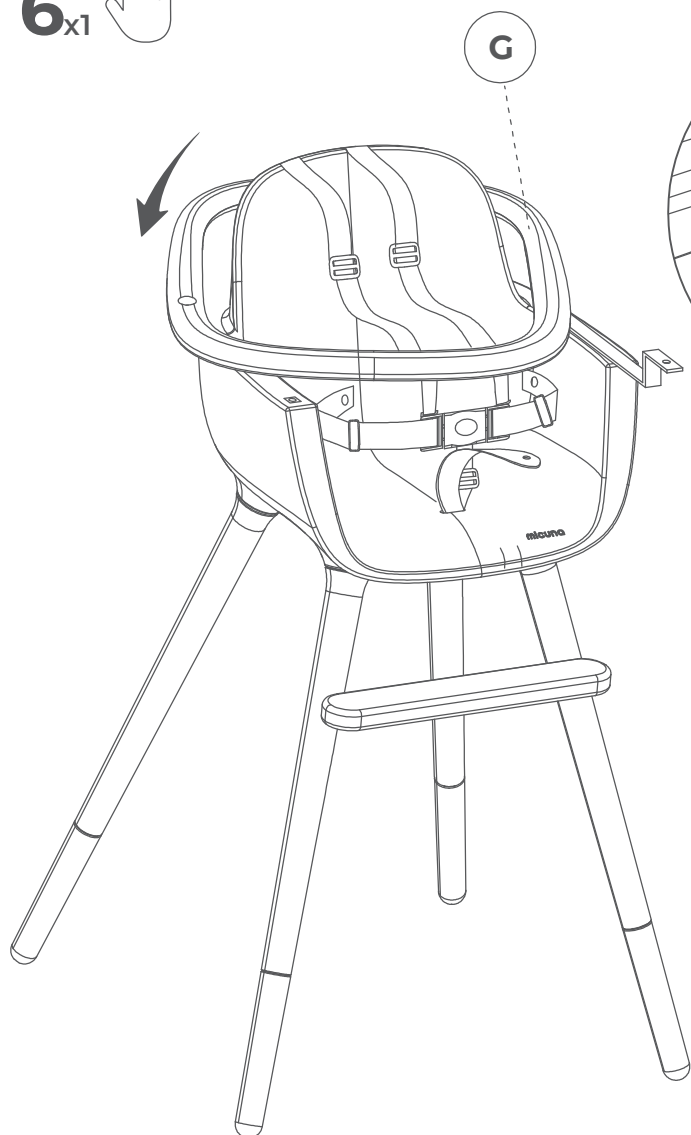


7x1 

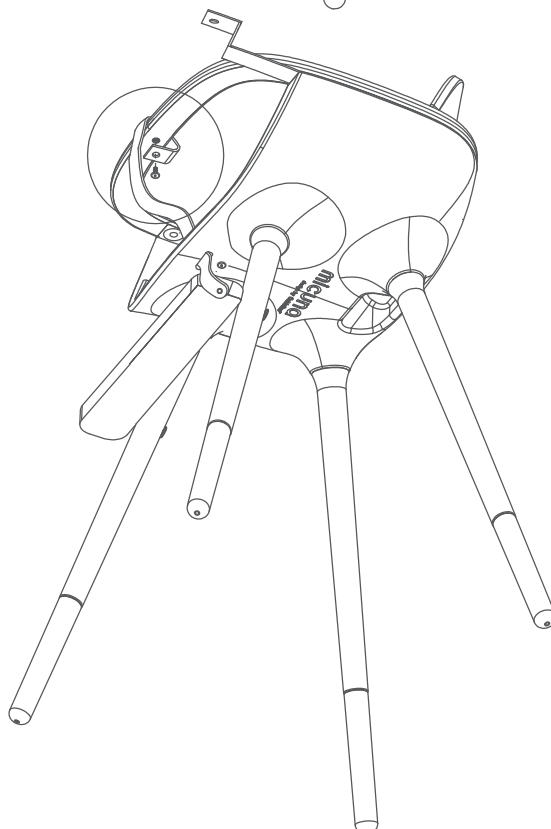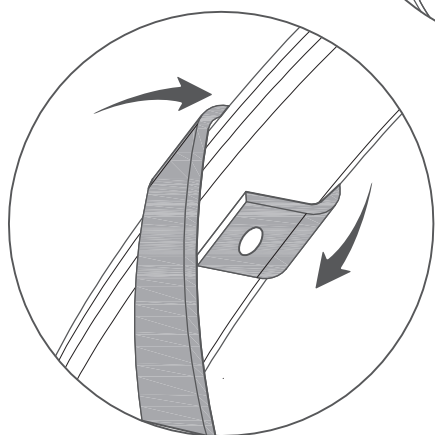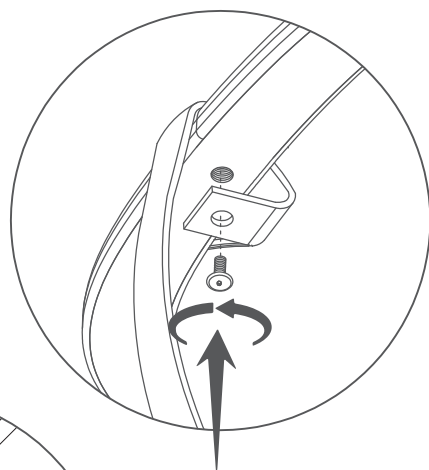

8x1 5mm





C10423
X1 (M8x40)

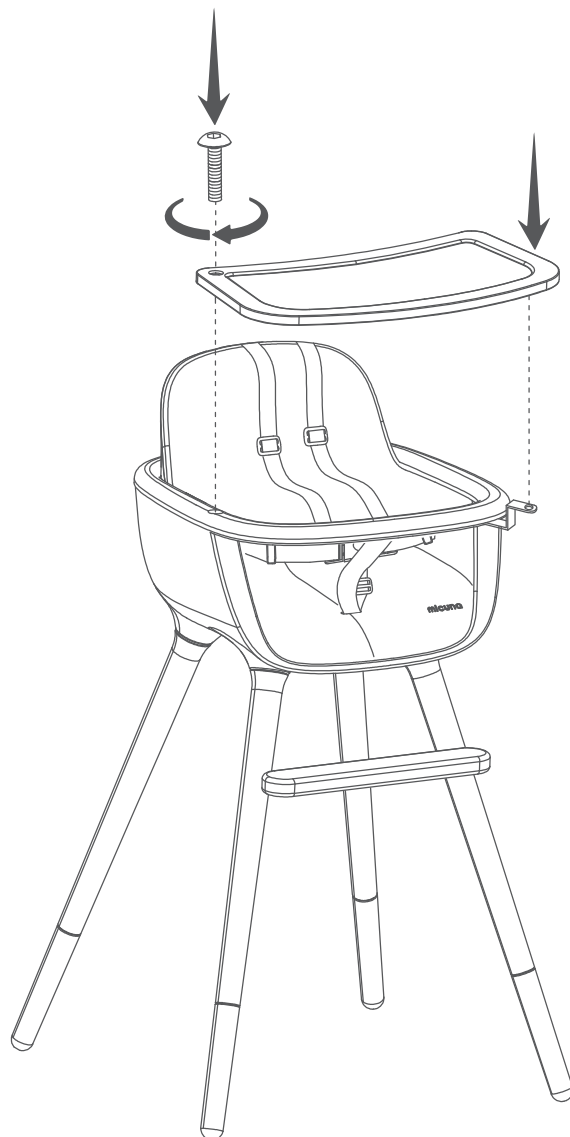

9x1 4mm



C00188
X1 (M4x9)

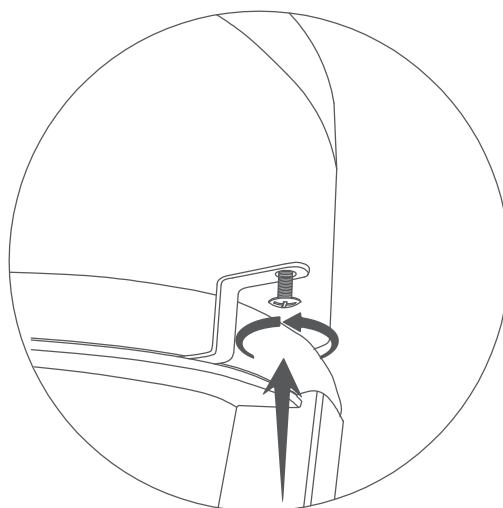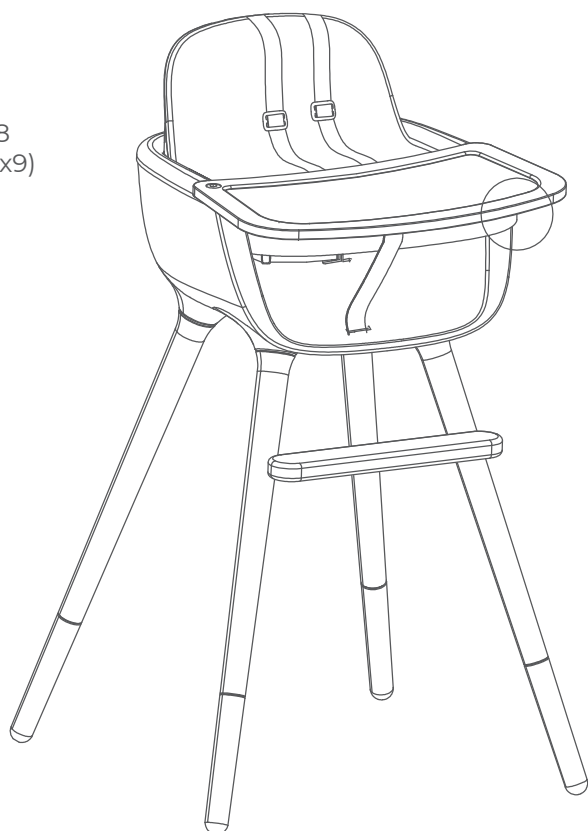

micuna
made with love