

-IMPORTANTE: A CONSERVAR PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

ES

EN

-IMPORTANT: PLEASE KEEP FOR FUTURE REFERENCE. READ CAREFULLY.

FR

-ATTENTION: CONSERVER POUR CONSULTER AU FUTUR.

IT

-IMPORTANTE: LEGGERE ATTENTAMENTE LE ISTRUZIONE. TENERE PER FUTURE CONSULTAZIONE.

PT

-IMPORTANTE: MANTENHA PARA FUTURAS CONSULTAS. LÉASE ATENTAMENTE.

R

-ВАЖНО: СОХРАНИТЕ ДЛЯ ДАЛЬНЕЙШЕГО ИСПОЛЬЗОВАНИЯ. ВНИМАТЕЛЬНО ПРОЧИТИТЕ.

A

— ماه. ظرفح اةعج ارملل. أرقا اديج لبق لامعتسال

CN

-重要事项: 保留以备将来参考, 请仔细阅读。

ES

NO APRIETE LOS TORNILLOS DEL TODO HASTA TENERLA COMPLETAMENTE MONTADA.

EN

DO NOT FULLY TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED.

IT

SERRARE LE VITI A MONTAGGIO AVVENUTO

PT

NÃO APERTE OS PARAFUSOS COMPLETAMENTE, ATÉ TER COMPLETAMENTE MONTADA.

R

НЕ ЗАТЯГИВАЙТЕ ВИНТЫ ДО ОКОНЧАТЕЛЬНОЙ СБОРКИ.


FR

ASSEMBLEZ LE BERCEAU AVANT DE SERRE COMPLETEMENT LES VIS.

AR

بجي ايرتلاو عمجلا فيلمع نم اعتنالا ىتح يغاريللا دش مكحت ال

在完全装好前, 不要拧紧全部的螺钉。

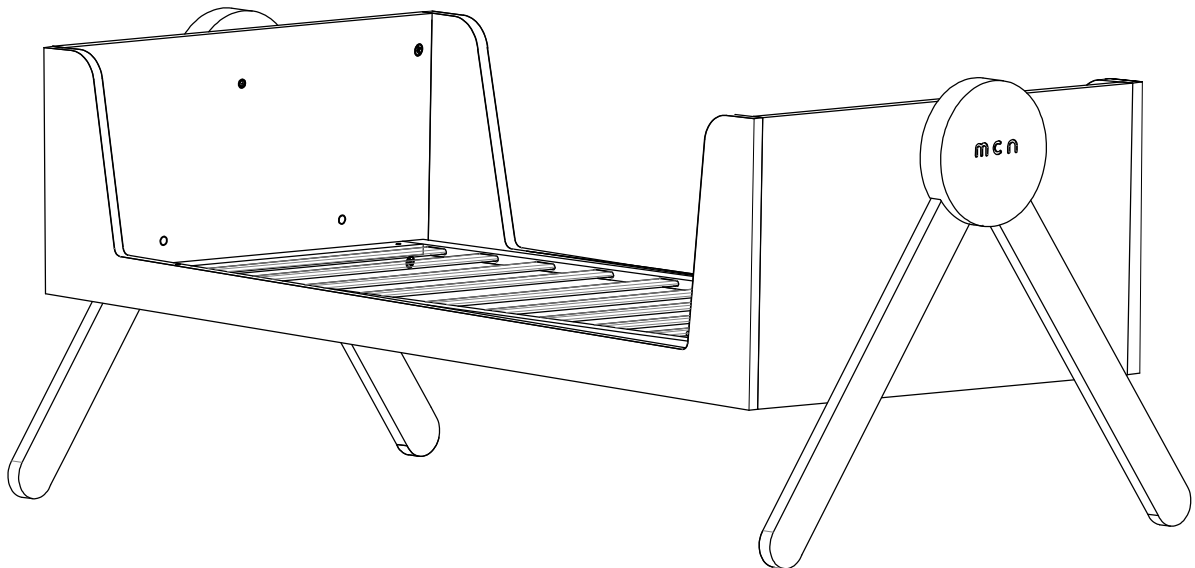



CM-1932 SWING

Camita de 140X70



Instrucciones de Montaje

Fabricado en Valencia, España

micuna
magic ideas for children

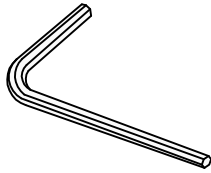


45'



<p>B X 2</p> <p>E</p> <p>M X 2</p> <p>L x 2</p> <p>K X 2</p> <p>J X 2</p>	<p>C07969 X18 M6X25</p>	<p>C01419 X8</p>
	<p>C08023 X8</p>	<p>C09547 X4</p>
	<p>C10638 X4 M6X17</p>	<p>C01537 X8</p>
	<p>C06545 X4 M6X50</p>	<p>C07893 X 4 M6X35</p>
		<p>C10340 X 10</p>



1.

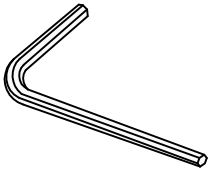


C07969 X 12

M6X25

X 2

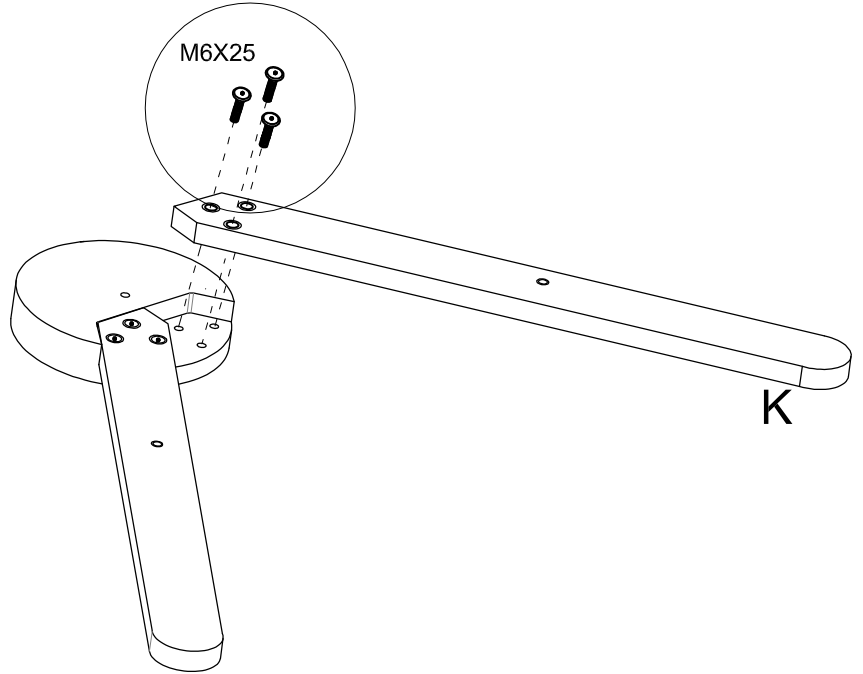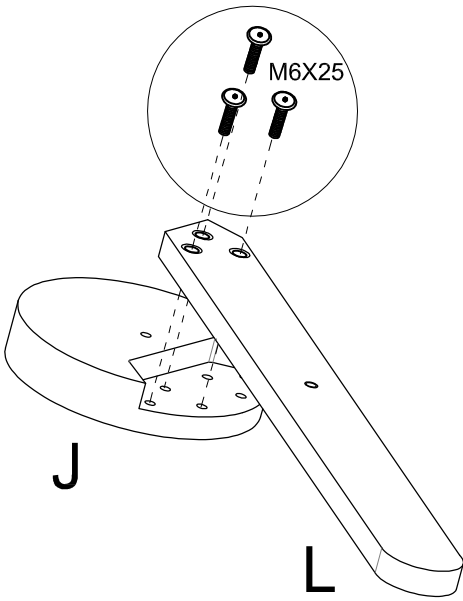


2.




C08023
X 8



C01419
X 8

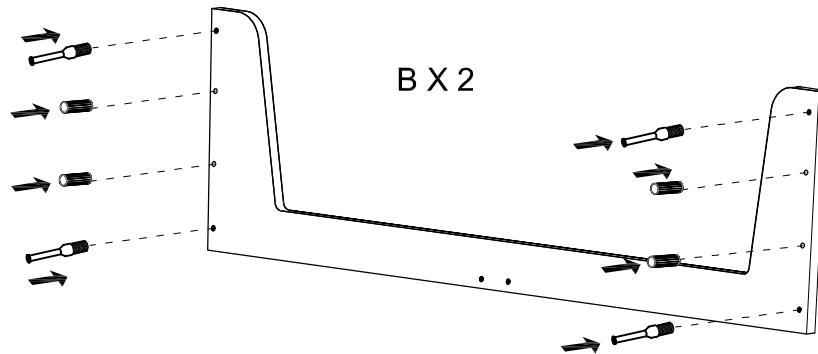



3.



C09547
X4

C10638
X4

C01537
X 8

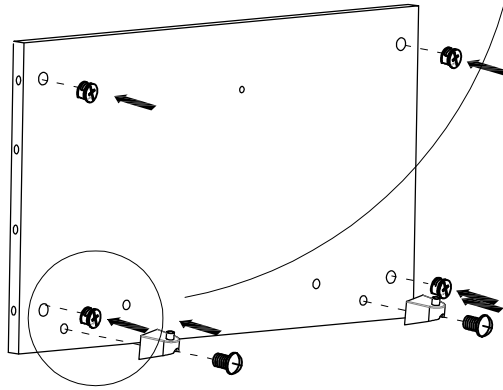
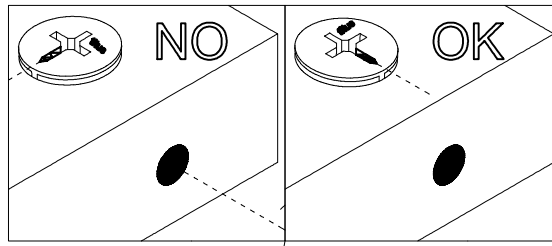


X 2

M




4.

C07969
X 6


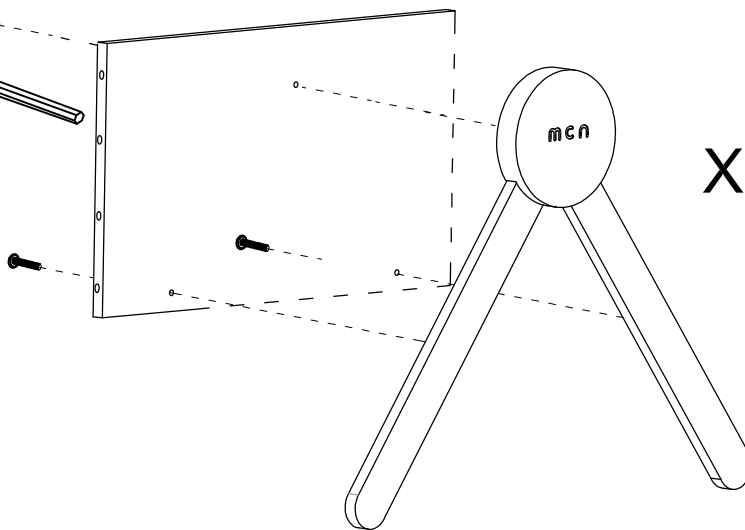
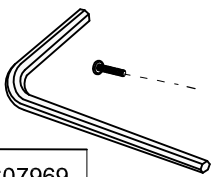


X 2

5.

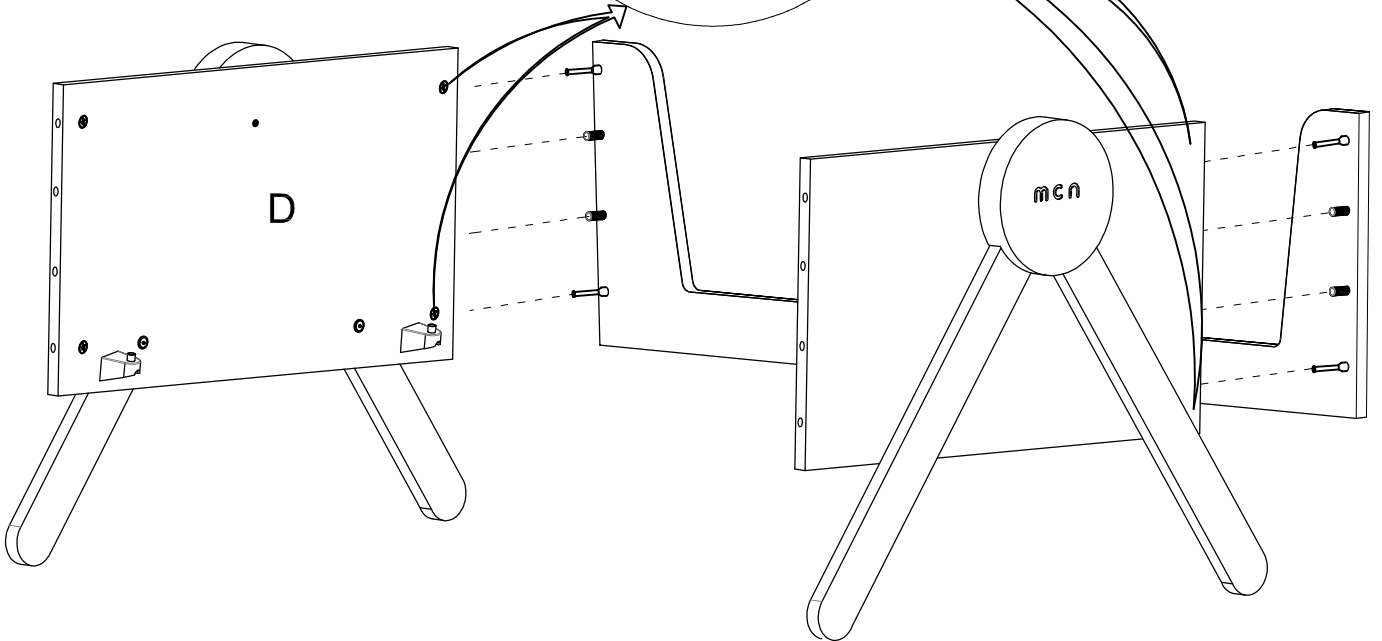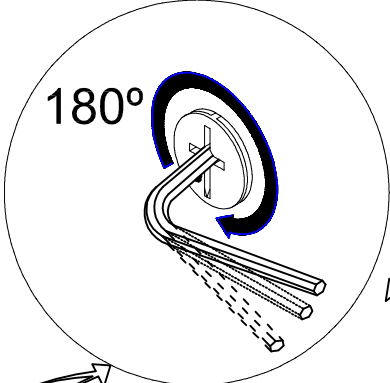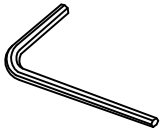


6.

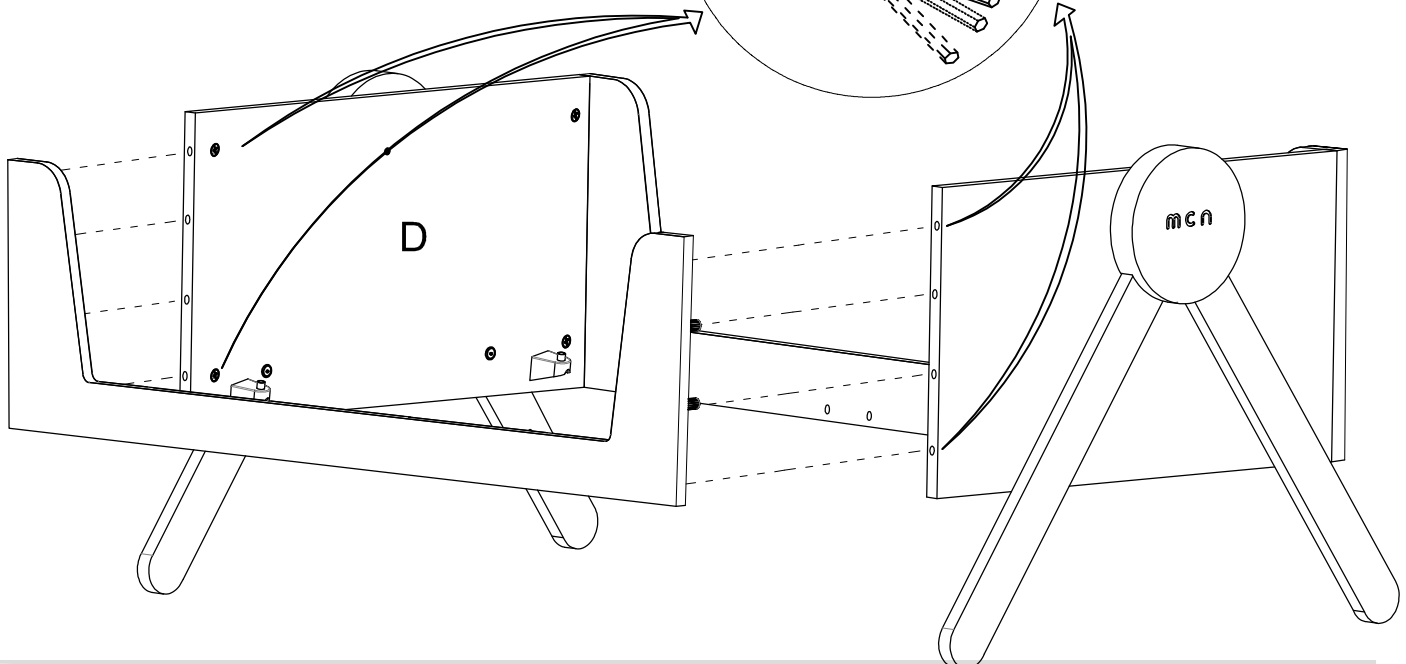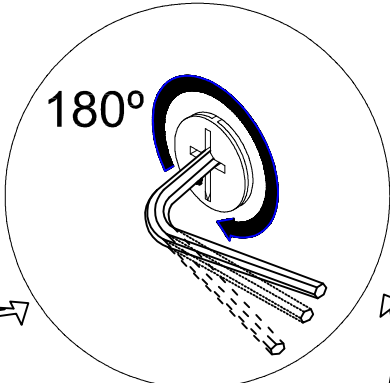
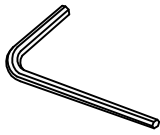


7.



C07893
M6X35 X 4

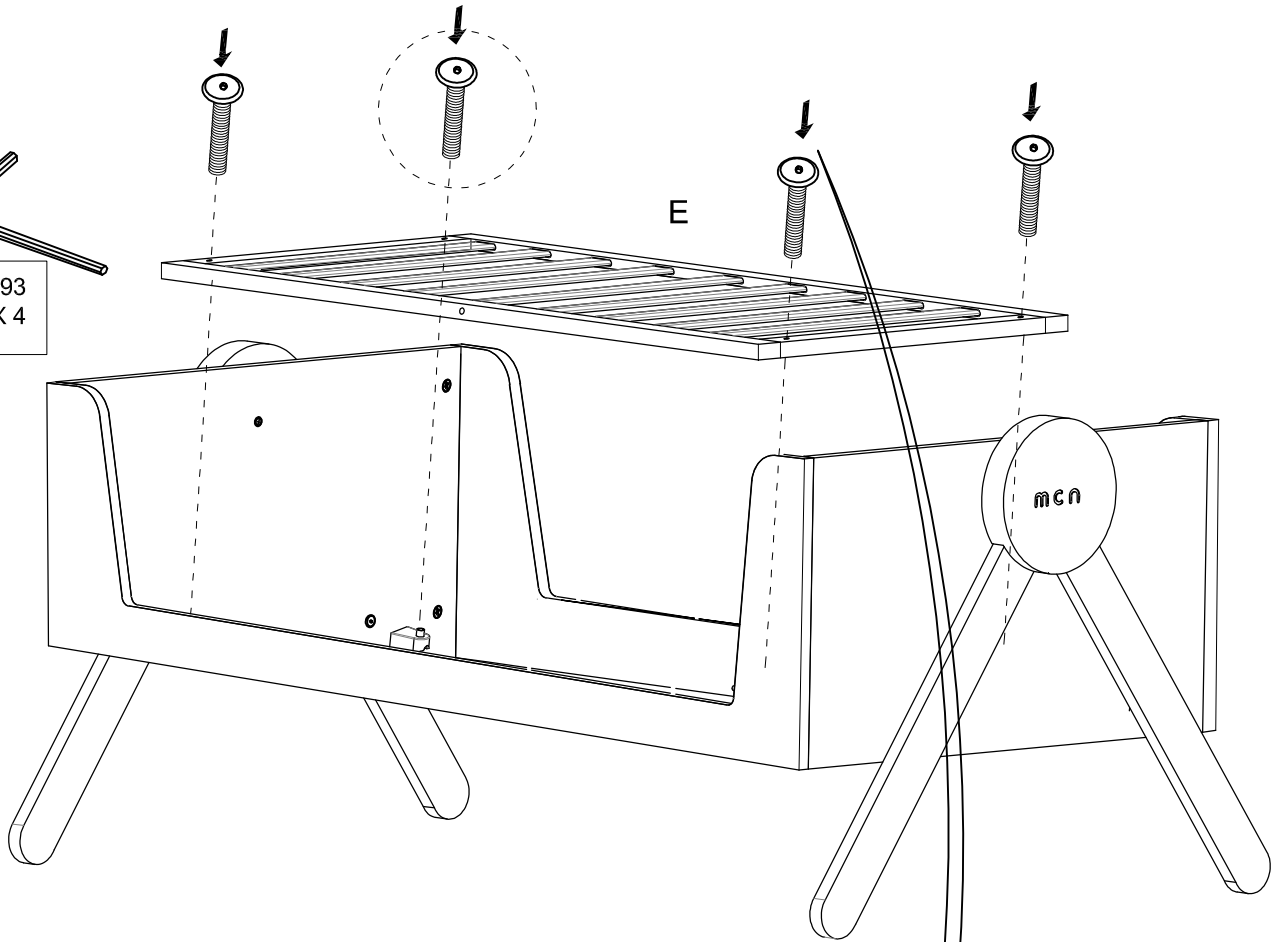


8.

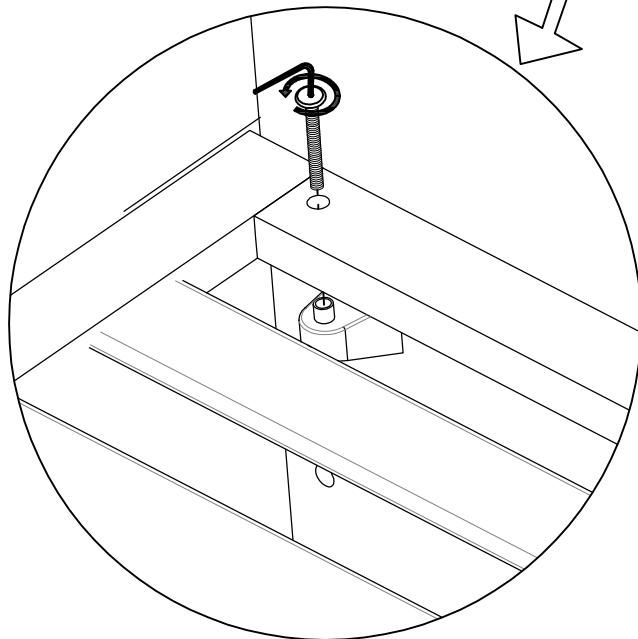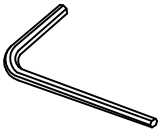

9.

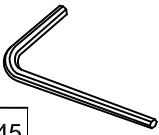

C06545
X4

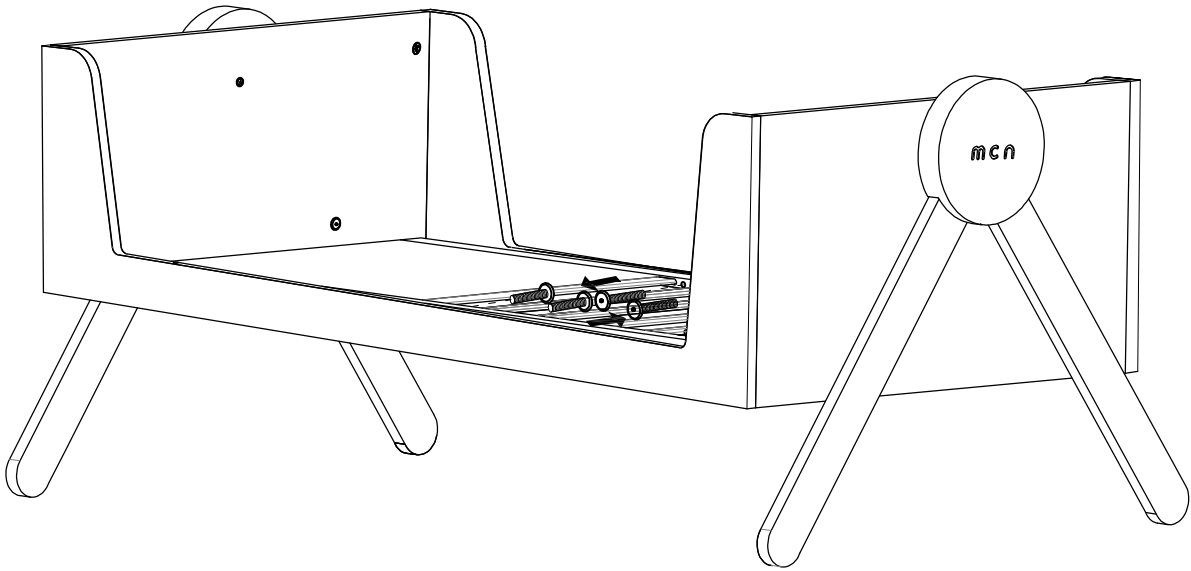

10.



C10340
X10

